


Temp Data Logger User Manual

—TempU06 Series


Model:

- TempU06
- TempU06 L100
- TempU06 L200

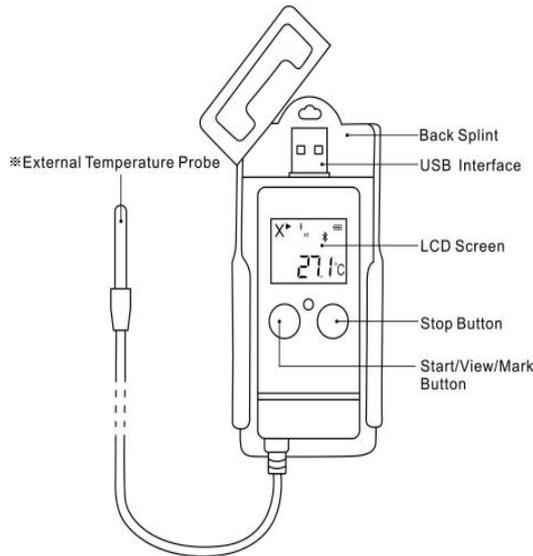

※Please note the Model TempU06 is with built-in temperature sensor, it does not have external temperature probe

LCD Display Instruction

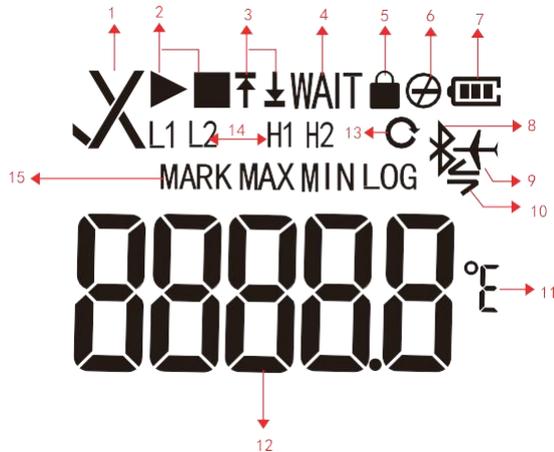

1	✓ Ok ✗ Alarm	8	Bluetooth**
2	▶ Start recording ■ Stop recording	9	Flight mode
3&14	Alarm zones ↑,H1,H2(High) ↓,L1,L2(Low)	10	Bluetooth communicating
4	Delay recording	11	Unit
5	Password (AccessKey) protected	12	Reading
6	Stop button disabled	13	Data cover
7	Remaining battery level	15	Statistics

※Please note the Model TempU06 do not have bluetooth function

Product Introduction

The TempU06 series are mainly used to monitor and record temperature data of vaccines, pharmaceuticals, foods, and other products during storage and transportation. The Bluetooth connectivity of the TempU06 series and Temp Logger App brings customers the advantages of tracking data for data viewing. And you can enable quick connection with PC to get data by Temperature Management Software, no cable or reader required for downloading data.

Feature

- Bluetooth and USB connection. Dual interface ensures convenience and stability**
- Large LCD screen with powerful indicators
- External temperature probe for low temperature condition, up to -200°C**
- Flight mode for air transportation**
- FDA 21 CFR Part 11, CE, EN12830, RoHS, NIST traceable calibration
- No need any software to get the PDF and CSV file

※Please note the Model TempU06 do not have bluetooth function or flight mode

※For the temperature range, please refer to the datasheet

LCD Screens

Home Screens



① Initialization



② Above upper & lower limit



③ Log interface



④ Mark interface



⑤ Max Temp interface



⑥ Min Temp interface

Error Screens



- a. If the display screen "E001" lights up, it indicates that the sensor is not properly connected, exceeds the detection range, or has a malfunction;
- b. If the display screen "E002" lights up, it means that the sensor is not detected during timed startup. Please reconfigure the device before use.

Download Report Screen




Connect data logger to USB port, it will automatically generate reports.

Connecting to USB

How to use

a. Start recording

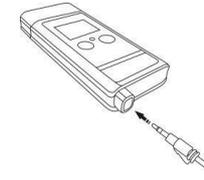


Press and hold the left button for more than 3s until the led light turns green, and the "▶" or "WAIT" displays on the screen, which indicates the logger is started.
(For the model with external temperature probe, please make sure the sensor is completely inserted into the device.)

b. Mark



When the device is recording, press and hold the left button for more than 3s, and the screen will switch to the "MARK" interface. The number of "MARK" will increase by one, indicating data was marked successfully.

c. Stop recording

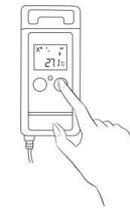

Press and hold the right button for more than 3s until the led light turns red, and the "■" displays on the screen, indicating stop recording successfully.

d. Turn on/off Bluetooth



Press and hold the two buttons for more than 3s at the same time, until the red light flashes quickly, and the "✈" displays on the screen or disappears, indicating the bluetooth was turned on or off.

(when the device is in flight mode, press and hold the two buttons for more than 3s will quit the flight mode)

e. Get report



After recording, there are two ways to get report: connect the device with USB port of PC or using Temp Logger App on smart phone, it will automatically generate PDF and CSV report.

Configure Device

Configure device via App *



Please scan this QR code to download the app.

Configure device via temperature management software

Please download the temperature management software from : <http://d.tzonedigital.com/TM.aspx>


※Please note the Model TempU06 do not have bluetooth function

Battery Status Indication

Battery	Capacity
	Full
	Good
	Medium
	Low (Please replace battery)


Battery replacement

a.Remove rear cover

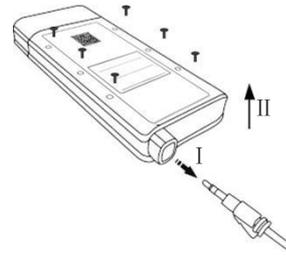

- I . Pull out the external sensor
- II . Remove the screw

b.Replace the rear cover

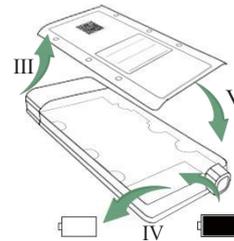

- III. Take out the rear cover
- IV. Replace the battery
- V. Replace the rearcover

※Put old batteries in special sorting bins

Cautions

1. Please read the manual carefully before using the logger.
2. When the logger is recording, do not move external temperature probe, otherwise may get error data.
3. Do not bend or press the end of the external temperature probe, as this may damage it.
4. Please recycle or dispose the data logger in accordance with local laws and regulations.

TZ-TempU06 datasheet

Tzone TempU06 Temperature Data Logger Suite

Industry leading temperature data logger suite provides different kinds of temperature range devices to provide a complete temperature recording solution.

Model	TempU06	TempU06 L100	TempU06 L200
Technical Information			
Sensor Type	Build in temp sensor	External temp sensor	
Battery Life	Typically 1.5 years	Typically 1 year	
Bluetooth	Not support	Support	
Weight(s)	100g	120g	
Connectivity	USB 2.0	USB 2.0 and Bluetooth 4.2	
Detecting Temperature Range	-80°C~+70°C	-100°C~+80°C	-200°C~+80°C
Software	Temp (RH) Management Software (For Windows,21 CFR 11 Compliant)	Temp Logger APP(For Android and IOS) Temp (RH) Management Software (For Windows,21 CFR 11 Compliant)	
Dimension	115mm*50mm*20mm		
Data Storage Capacity	32000		
Start Mode	Push-To-Start or Timing Start		
Logging Interval	Programmable (10s ~ 18h) [Default:10mins]		
Alarm Range	Programmable [Default: <2°C or >8°C]		
Alarm Delay	Programmable (0 ~ 960mins) [Default: 10mins]		
Report Generation	Automatic PDF/CSV Report Generation		
Temperature Accuracy	0.5°C		
Temperature Resolution	0.1°C		
Protection Grade	IP65		



Authorized Distributor
 APL ASIA CO., LTD.
 11/129-132 Moo.5 Lamlukka Rd., T.Kookut, A.Lamlukka, Pathumthani 12130
 Thailand. TEL. 0-2995-4461-3, FAX. 0-2995-4464
 www.apl-asia.com
 EMAIL : sales@apl-asia.com
 LINE@ : @APL-ASIA

