



Gas Detector

Operator's Manual

GTQ-Anr-A/ GTQ-Anr-D/ AG210/ AG211

Industrial and commercial combustible/toxic gas detector

Dear customer:

Glad to have your trust and support on AIYI Technologies, we will provide you best product and service in return.

As an ISO certified manufacturer. AIYI Technologies has been focus on safety and environment many years, we provide you gas & dust detector and systems. The design and manufacture of product is strictly follow the international standard and company regulations, and each product get a normative QC control to ensure the best quality for you.

Please read and understand this operator's manual before operating instrument. Improper use of the gas monitor could result in bodily harm or death. Please don't hesitate to call our hotline: +86-2587756351 if you have any questions or suggestions. Thanks!

We are honored to have the opportunity to serve you.

Yours sincerely,

Dongxu Zhang

Vice-General Manager

Nanjing AIYI Technologies Co., Ltd.

Copyright Statement

Copyright© 2017 Nanjing AIYI Technologies Co., Ltd. All Rights Reserved.

This document is the property of Nanjing AIYI Technologies Co., Ltd. And can be neither reproduced nor disclosed to a third party without a written authorization.

is the registered trademark of Nanjing AIYI Technologies Co., Ltd. The others inside of the document belongs to other companies.

Disclaimer

The texts, photos, graphics, diagrams and illustrations provided in this manual are for explanation and explanation purposes only, and may differ from the specific products. Please refer to the actual product. AE may update this manual without prior notice due to product upgrades or other needs. Unless otherwise specified, this manual is intended as a guide only and the statements made do not constitute any form of warranty.

To the fullest extent permitted by law, the products described in this manual are provided "as is" and may contain defects, errors or malfunctions. AIYI Technologies does not provide any express or implied warranties of any kind, including but not limited to quality satisfaction. It is suitable for specific working conditions, through government inspections, and does not infringe the rights of third parties. There is no compensation for any special, incidental, incidental or consequential damages resulting from the use of this manual or the use of our products. To the fullest extent permitted by law, AIYI Technologies liability does not exceed the amount paid for the product you purchased.

Ai Technology shall not be responsible for the personal injury or property damage of you or a third person for the following reasons: The equipment is not properly installed or used in strict accordance with the requirements; it is not regularly maintained as required; force majeure ; your own or third-party reasons (including but not limited to access to third-party products, components, etc.).

The right to interpret and modify this disclaimer belongs to Nanjing Aiyi Technology Co., Ltd.

Introduction to the operation manual

This manual mainly introduces the hardware characteristics, installation methods and maintenance of the AG200, Anr-N, Anr-S series gas detection transmitters.

This manual is suitable for the following personnel: instrument maintenance engineers, field users.

In addition to this manual, if you need to obtain the latest product information, you can go to www.autequ.com or call the hotline +86-2587756351 for consultation.



Note: To avoid possible personal injury and equipment damage before and during the installation of the equipment, please read the relevant contents of this manual carefully.

Contact Us

Nanjing AIYI Technologies Co., Ltd.

Address: Building 13, No. 1318 Qingshuiting East Road, Jiangning District,

Nanjing 210000, Jiangsu, China

Tel: +86-25-87756351

Fax: +86-25-87787362

Website: <http://www.aiytec.com>

Email: sales@autequ.com



CONTENT

Chapter 1: Product Introduction

1.1 Brief introduction	01
1.2 Specifications	02
1.3 Technical indicators	05

Chapter 2: Installation

2.1 Packing list	07
2.2 Installation cautions	07
2.3 Installation preparation	08
2.4 Location selection	08
2.5 Installation	09
2.6 Wiring	10
2.7 Power-on test	12

Chapter 3: Operation and Maintenance

3.1 Turn on	13
3.2 Main menu	13
3.3 Alarm setting	13
3.4 Calibration preparation.....	14
3.5 Zero calibration	14
3.6 Span calibration	15
3.7 485 address setting	15
3.8 Factory setting	16
3.9 4mA 20mA Current correction	16
3.10 Save and Back	17
3.11 Maintenance	17

Chapter 4: Appendix

4.1 Appendix 1 Overview of Detected Gases	18
4.2 Appendix 2 Detected gas overview	19
4.3 Appendix 3 Calibration gas concentration	21
4.4 Appendix 4 Common detection failures and treatment.....	22



Chapter 1: Product Introduction

1.1. Brief introduction

AE'S GTQ-Anr-A、GTQ-Anr-D、AG210、AG211 gas detector are suitable for detecting the content of combustible and toxic gases such as combustible gas, oxygen, and toxic gases in explosion hazard areas. The product adopts the integrated design of sound and light alarm, which can effectively warn of various gas leakage hazards; modular design, easy maintenance; with infrared remote control, can be achieved without open cover operation. IP66 protection class

Features:

- Use high-performance sensors, quick response, safer and more reliable.

Model Description:	GTQ-Anr-A	4-20mA signal catalytic combustible gas detector
	GTQ-Anr-D	RS485 signal catalytic combustible gas detector
	AG210	4-20mA signal toxic gas detector
	AG211	RS485 signal toxic gas detector
GTQ-Anr-A、GTQ-Anr-D are combustible gas detector for industrial and commercial use		
, AG210、AG211 are gas detector , which are collectively referred to as gas detectors .		

- Stainless steel + aluminum alloy material, the protection level of the whole table reaches IP66, which is suitable for harsh working conditions.

- High-brightness display, LED status indicator, display rich information.
- Built-in low-report, high-report, and fault three switches, which can realize multi-level interlocking.
- Infrared remote control operation, no need to open the cover on site.
- Standard electrical interface, support external sound and light alarm

A variety of signals are available to support the different needs of customers.


The design, manufacture and verification of this product follow or refer to the following national standards:

- GB15322.1-2019 "Combustible Gas Detector Part 1: Point-type Combustible Gas Detector for Industrial and Commercial Use"
- GB 3836.1-2010 "Explosive Atmosphere Part 1: General Requirements for Equipment"
- GB 3836.2-2010 "Explosive Atmosphere Part 2: Equipment Protected by Flameproof Enclosure "d""
- GB 3836.4-2010 "Explosive Atmosphere Part 4: Equipment Protected by Intrinsic Safety Type "i""
- GB/T 50493-2019 Code for Design of Detection and Alarm of Combustible Gas and Toxic Gas in Petrochemical Industry"
- GB 12358-2006 "General Technical Requirements for Gas Detector and Alarm in Working Environment"
- GB 16838-2005 "Environmental Test Methods and Severity Levels of Fire Electronic Products"





- GB/T 4208-2017 "Enclosure protection class (IP code)"
- GBZ 2.1-2007 "Occupational Exposure Limits for Hazardous Factors in the Workplace Part 1: Chemical Hazardous Factors"
- JJG365-2008 "Electrochemical Oxygen Analyzer"
- JJG 693-2011 "Combustible gas detection alarm"
- JJG 915-2008 "Carbon Monoxide Detection Alarm"
- JJG 695-2003 "Hydrogen Sulfide Gas Detector"
- JJG 551-2003 "Sulfur Dioxide Gas Detector"

1. 2. Appearance structure

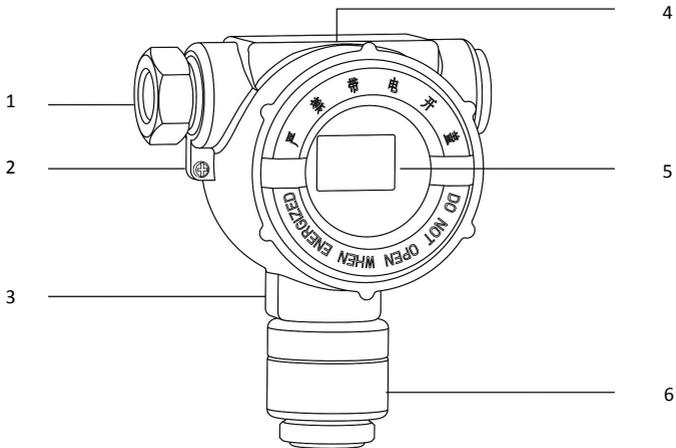

- | | | | | | |
|---|-------------------------|---|--------------|---|-------------------------|
| 1 | Explosion-proof adapter | 2 | Ground screw | 3 | Base mounting hole |
| 4 | Nameplate | 5 | Screen | 6 | Sensor protection cover |

Screen and indicator

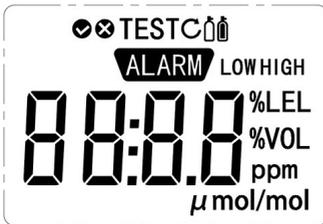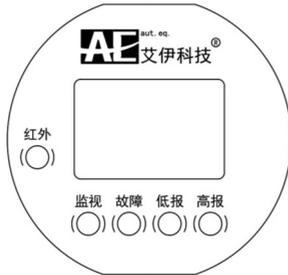

2、Status

ALARM LOW HIGH

ALARM Alarm indication

LOW Alarm-1

HIGH Alarm-2

3、Display



Value display

IR	Receive infrared remote control signal
POWER	Normal operation, the green light is always on, and the power goes out
FAULT	Normally extinguished, the yellow light is always on when the fault occurs
ALARM1	Normally extinguished, the red light is always on when the low time signal is reported
ALARM2	Normally off, the red light is always on when the high time signal is on

1、Task



✓ Success

✗ Fault

TEST Self-inspection

⌚ RS485 signal

🧴 Zero calibration indication

🧴 Range calibration indication

4、Unit

%LEL	%VOL	ppm	μmol/mol
%LEL	Percentage of lower explosive limit		
%VOL	Volume percentage		
μmol/mol	Volume ratio per million		
ppm	Volume ratio per million		




Remote control




- ↑ Move up or number plus
- ↓ Move down or decrease the number
- ← Move Left
- Move Right
- OK Confirm or enter the menu
- Silencer Silence when alarming
- Exit Exit

Gas detector dimensions

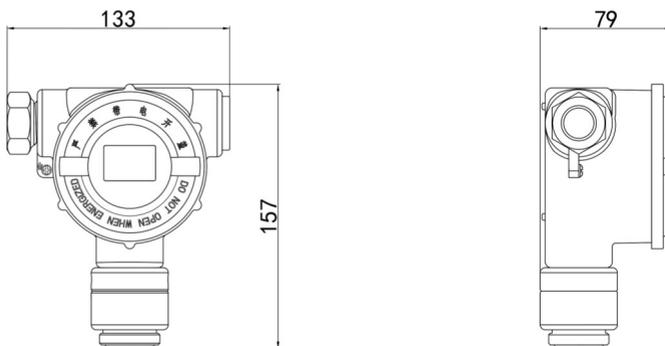

Gas detector match with GARY sound and light alarm dimensions

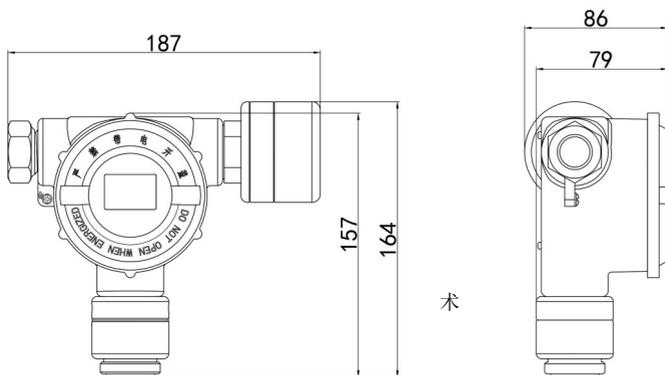

1. 3. 技

术

指标



Description	Specifications	GTQ-Anr-A	GTQ-Anr-D	AG210	AG211
Gas detected					
Combustible gas	Combustion catalytic	●	●	-	-
Toxic gas	Electrochemical, PID, Infrared	-	-	●	●
Detection					
Measure range	3-100%LEL	●	●	-	-
	See Appendix	-	-	●	●
See Appendix *	T90≤30S	●	●	-	-
	T90≤30/60/180S	-	-	●	●
Accuracy*	≤±3%FS	●	●	●	●
Repeatability*	≤3%FS	●	●	●	●
Electric					
Power supply	18-28VDC(Standard24VDC)	●	●	●	●
Power consumption	≤2.5W	●	●	-	-
	≤2W	-	-	●	●
Single output	4-20mA	●	-	●	-
	RS485	-	●	-	●
Wiring	Three wiring	●	-	●	-
	Four wiring	-	●	-	●
Cable	RVVP3*1.0mm ²	●	-	●	-
	RVVP4*1.0mm ²	-	●	-	●
Relay output	Three relay output (250VAC/5A 30VDC/5A)	●	●	●	●
Display & Operation					
Display	LCD Display	●	●	●	●
Indicator light	Power, fault, alarm 1, alarm2	●	●	●	●
Operation method	IR remote control operation	●	●	●	●
Operation Environment					
Ingress protection	IP66	●	●	●	●
Temperature	-40□~+70□	●	●	-	-
	-20□~+60□	-	-	●	●
Humidity	10~95%(No condensation)	●	●	●	●
Pressure	80-120kPa	●	●	●	●



Description	Specifications	GTQ-Anr-A	GTQ-Anr-D	AG210	AG211
Structure					
Body Material	ADC12Aluminum alloy + 304L stainless steel	●	●	●	●
Conduit Port	NPT1/2	●	●	●	●
Weight	About 1.45kg	●	●	●	●
Dimensions	157*133*79mm(H*W*D)	●	●	●	●

Note: ● means it has this function,-means it does not have this function.

*Refer to attached table 1 for detailed detection gas.

*Different gases will be different, and their response time, error, and repeatability are different. The data in the above table is for reference only. Please consult the manufacturer for details.

Chapter 2: Installation

2. 1. Packing list

Please check and count the goods before installation to confirm that the appearance of the packing box is complete. After unpacking, check the installation accessories and check whether they are complete. If there is any loss, please contact our company as soon as possible. Items not included in the packing list may be used during the installation process, please purchase by yourself.

Under normal circumstances, the gas detection transmitter contains the following products and accessories:



Gas detector



Remote control



manual



certificate/calibration report



installation base plate and accessories

2. 2. Installation cautions

- ▮ Before the detector is installed, it should be inspected in detail whether the explosion-proof mark conforms to the environment of the explosive gas mixture and whether there is obvious crack in the appearance to ensure the explosion-proof performance of the product.
- ▮ When applied to the field of fire type approval, the gas detector should be connected to the corresponding controller, and it is forbidden to connect with other brands and models. The controller must be installed in a non-hazardous area.
- ▮ Please keep the power off state during the installation and wiring process to ensure that there is no flammable gas in the environment, and ensure that the temperature and humidity of the use environment meet the working requirements of the detector.
- ▮ The detector is designed for gas detection in the environment and should not be used on pipelines or other purposes.
- ▮ The detector must be installed so that the sensor is down and the sensor cover must not be blocked or painted.
- ▮ The installation and wiring of the detector should be as far away as possible from high-power equipment.
- ▮ In an oxygen-deficient atmosphere, the catalytic combustion type sensor may be lower than the actual reading. When the oxygen concentration is lower than 10%vol, the instrument will not work properly.
- ▮ Long-term presence of H₂S, halogen elements (fluorine, chlorine, bromine, iodine), heavy metals, organic solvents, and acid gases in the environment may cause distortion of the test results, need periodic inspection or calibration.
- ▮ Be careful not to touch the internal circuit when wiring, and the instrument case should be grounded.


The installation, use and maintenance of the product shall comply with the instruction manual and the "Electrical Equipment for Explosive Gas Atmosphere" (GB3836.13-2013) Part 13: Inspection and Repair of Electrical Equipment for Explosive Gas Environment, "Electrical Equipment for Explosive Gas Environment" (GB3836.15-2017) Part 15: "Electrical installation in hazardous areas (except for coal mines), "Electrical equipment for explosive gas atmospheres" (GB3836.16-2017) Part 16: Inspection and maintenance of electrical installations (excluding coal mines) and Relevant regulations on "Construction and Acceptance Specifications for Electrical Equipment Installation Engineering Explosion and Fire Hazardous Environment Electrical Installations" (GB50257-2017).



2.3 Installation preparation

- Complete gas detector assembly, mounting accessories
- Screwdriver, multi-meter (if needed), etc.
- Power and cable

The standard working power supply of the detector is 24VDC. In view of the voltage drop caused by the cable resistance, ensure that the detector supply voltage is not less than 18VDC. If directly connected to the DCS or PLC system, please ensure that the power supply of the detector and its entire loop resistance should be $\leq 300\Omega$. For the case that the voltage cannot meet the minimum working voltage of the detector, it is necessary to install equipment such as repeater and explosion-proof box.

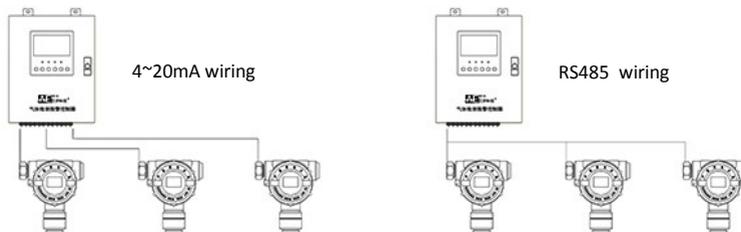

The detector and the controller are connected by shielded cables, and different cables should be selected depending on the operating conditions. Cable laying should pay attention to the different wiring methods of the bus system and the branching system; it should comply with the national and industrial specifications of the "Electrical Safety Regulations for Explosive Hazardous Locations of the People's Republic of China"; the wiring should be avoided in parallel with the power cable, and the interference affects the communication. The recommended cable is as follows:

Model	AG210	AG211	GTQ-Anr-A	GTQ-Anr-D
Single output	4~20mA	RS485	4~20mA	RS485
Recommended cable	RVVP 3×1.0mm ²	RVVP 4×1.0mm ²	RVVP 3×1.0mm ²	RVVP 4×1.0mm ²
Wiring	4~20mA	RS485	4~20mA	RS485

For long-distance transmission, replace the cable or install a repeater or other device according to the actual situation.

2.4. Location selection

The location of the gas transmitter is critical to achieving the best results. When determining the location, it is recommended to consider the following factors:

- The design drawings and the "Code for Design of Detection and Alarm of Combustible Gas and Toxic Gases in Petrochemical Enterprises" (GB50493-2009) shall be followed.
- The detector should be installed at a position where the gas flow is at the maximum concentration or as close as possible to the source of the gas leak.
- When installing indoors, if the leak source is outdoors, the detector should be installed at the air inlet.



! The source of gas leakage that is lighter than air is in a closed or semi-enclosed plant. The detector should be placed above the source of the leak and at the highest point in the plant where it is prone to build up.

! Installation height selection:

When it is heavier than air: the height of the detector should be higher than the floor (floor surface) 0.3-0.6m; when it is lighter than air; the height of the detector should be 0.5-2m higher than the leakage source; when it is close to the air specific gravity: change The height of the detector installation is within 1 m of the source of the leak.

! The detector should be installed in a place where there is no wind, no dust, no water, no impact, no vibration, no corrosion, and no electromagnetic interference.

2.5 Installation

! Please refer to 2.2 Installation Precautions for product installation.



! Connect the detector to the mounting base AB hole with the M5 screw (included in the kit).

! This product can be installed on wall or riser.


! Wall Mounting: Secure the detector to the wall with four 6mm expansion tubes and self-tapping screws (included in the kit) by mounting the base CEEF hole.

Standpipe installation: Use the U-shaped clamp in the accessories to fix it on the cylinder or pipe (suitable for DN30-65mm) through the G H hole of the installation base plate.

Installation accessories size

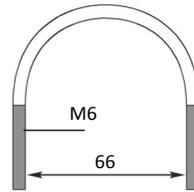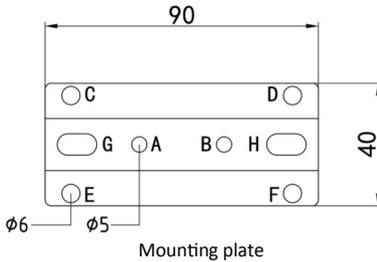

Installation Diagram

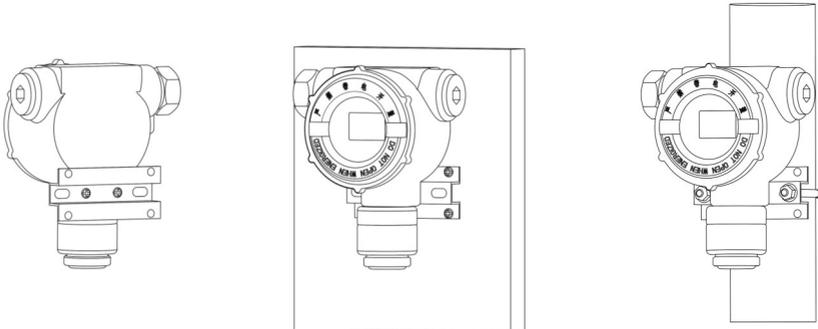



2. 6. Wiring

! Unscrew the upper cover of the transmitter counterclockwise.

! Unscrew the fixing screws on both sides of the display module, buckle the upper and lower recessed parts of the panel with your fingers, and slowly pull out the circuit module upwards. Note that there is a cable link between the circuit module and the sensor, and do not use violence to operate.

! Strip the cable to the required size, and unscrew the adapter, metal gasket and rubber sealing ring of the transmitter wiring port in turn. The cable passes through the above parts one by one and then into the inside of the transmitter cavity. After adjusting the cable, tighten the compression nut to compress the cable tightly.

! Use cold-pressed terminals for crimping at all wiring parts to avoid short circuits, bifurcation or falling off of wire ends.

! Connect the cables firmly according to the markings of the wiring terminals.


! Ground the grounding screw of the enclosure in accordance with the regulations, and the grounding point should be prepared for corrosion protection.

! Be sure to tighten the upper cover after wiring is completed.




Note: Since the wiring can only be carried out after the top cover is unscrewed, the explosion-proof safety performance of the transmitter after unscrewing will not be guaranteed. If the transmitter is installed in an explosive hazardous area, take safety precautions before wiring, including but not limited to:

Wiring



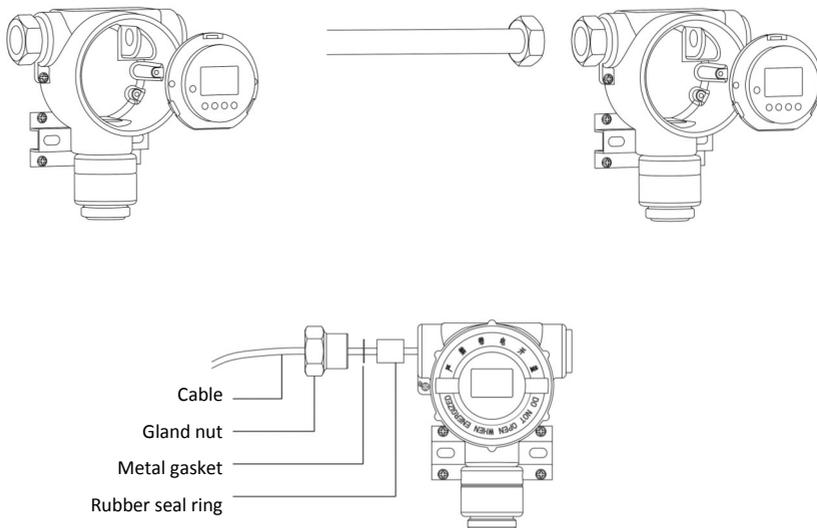


Terminals

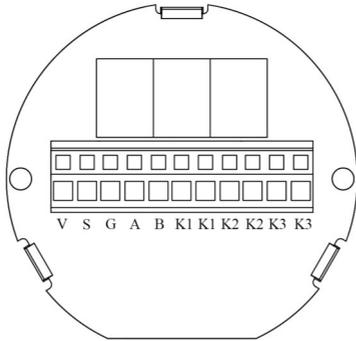


- V 24V power positive pole for detector
- S 4~20mA signal output
- G 24V power negative pole for detector
- A B RS485 signal (only for setting use)
- K1 Low alarm relay contact output
- K2 High alarm relay contact output
- K3 Fault relay contact output

Note: 4~20mA signal output and RS485 output can only choose one, pay attention to distinguish the actual

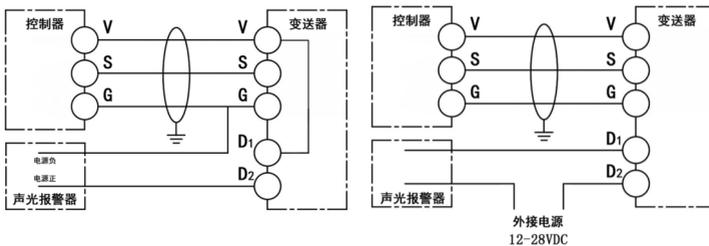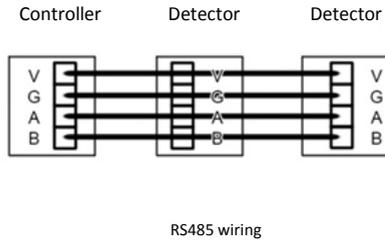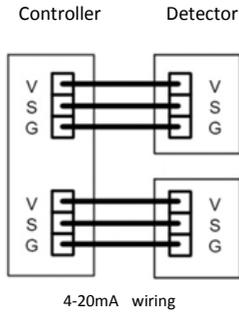



Grounded

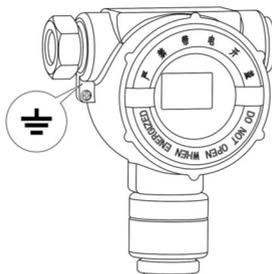

2. 7. Power-on test

▮ The first power-on should be stable for not less than 20 minutes. After the power is turned on, the detector may have an alarm phenomenon. This is determined by the characteristics of the sensor itself. After waiting for the preheat/polarization, the detector will automatically return to normal value and working. In the normal working mode, the detector will display the measured gas concentration value in real time and transmit the corresponding 4~20mA or RS485 signal.

▮ Before the system is powered on, you should verify that the wiring and installation are correct.

▮ Due to the nature of the sensor, the detector needs to be warmed up/polarized for a period of time before it can work properly. Sensors with different principles have different warm-up times, usually:

Gas	Principle	Time	Gas	Principle	Time
Combustible gas	Combustion catalytic	0.5h	O2	Electrochemical	0.5h
Toxic gas	Electrochemical	1h	ETO	Electrochemical	72h
CO2	Infrared	1h	VOC	PID	0.5h
The above time is for reference only, please consult the manufacturer for details.					

▮ Before the transmitter works normally, there may be inaccurate values, false alarms, etc. Please wait patiently. During this period, do not perform any operations such as calibration or parameter changes.

▮ If the transmitter still does not work normally after the warm-up/polarization time, please refer to the attached table 4 to troubleshoot or directly consult the manufacturer.

Chapter 3 Operation and Maintenance

3. 1. Turn on



Self-check



Version No.



Countdown



Main interface

After power-on, the monitor light on the transmitter panel is always on, and the screen displays the self-check, version number, and countdown (warm-up) 45s before entering the main interface.

3. 2. main menu



Password



Alarm-1



Alarm-2



Zero Calibration



Range calibration



485 address set



Factory set



Save and exit

! The transmitter is equipped with an infrared remote control for operation. The operation should make the infrared transmitting end of the remote control aim at the infrared receiving window on the transmitter panel.

Press the "OK" key to enter, enter the password (four "OK" keys) and then enter the main menu (automatically return to the main interface if there is an operation error). The main menu includes 7 options including low alarm, high alarm, zero calibration, range calibration, 485 address setting, factory setting, and save and exit. Press the "Up" and "Down" keys to select, and press "Exit" to exit without saving.

3. 3. Alarm setting



Alarm-1



Value setting



Back



Alarm-1



Value setting




Back

Enter the alarm setting menu. At this time, the screen displays the current alarm value. Press the "Up" and "Down" keys to adjust the value, and press the "Left" and "Right" keys to adjust the number of digits. After setting, press "OK" to save and return to the previous menu.

Note that oxygen is higher than the high alarm, lower than the low alarm, and other poisonous gas and combustible gas are higher than the alarm value.

3. 4. Calibration preparation

Prepare before calibration: zero standard gas, span standard gas, calibration regulator (including flow meter), matching calibration adaptor, calibration hose.

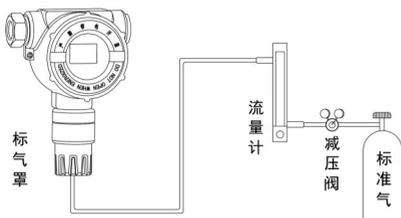

Zero gas and span gas cylinder

Gas regulator

Calibration hose (about 0.7m)

Calibration adaptor

Gas detector

Connect the calibration gas cylinder, calibration regulator, hose, calibration adaptor, and open the regu-



Note: After calibration, the regulator of the calibration gas cylinder must be shut off in time to prevent any danger caused by gas leakage.


lator and pass the gas to gas detector. Then do calibrate operation after the a stable readings.



Zero calibration



Zero adjust

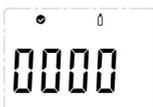

Calibration OK



Calibration Fail



3. 5. Zero calibration

▮ In order to ensure accuracy, it is recommended to use pure nitrogen for zero calibration.

▮ Slowly open the gas cylinder valve, adjust the flow meter knob to 0.5L/min, ventilate and wait for a stable readings, and start calibration.

▮ Enter the zero point calibration menu, press the "OK" key to calibrate, if the test is successful, it will display \checkmark and then return to the previous menu with "SAVE" option; if it displays \times , it means the calibration failed.

▮ After entering the zero calibration menu, you can select "SAVE" to save the data and back to home menu. Or press the "BACK" key to exit without saving. At this time, the screen displays \times and returns to the previous menu.

▮ The above operation is recommended to be repeated 3 times to ensure the stability of the instrument.



Span calibration



Calibration interface



Calibration Ok



Calibration Fail

3. 6. Span calibration

▮ For different gases, the corresponding concentration standard gas should be selected. For details, please refer to appendix 3.


▮ Slowly open the gas cylinder valve, adjust the flow meter knob to 0.5L/min, ventilate and wait for a stable readings, and start calibration.

▮ Enter the span calibration menu, the current calibration value is displayed on the screen at this time, press the "up" and "down" keys to adjust the value, and press the "left" and "right" keys to adjust the number of digits. Set the value to the corresponding ventilation concentration and press the "OK" button to calibrate. If the test is successful, it will display \checkmark and return to the previous menu; if it displays \times , it means the calibration has failed.

▮ After entering the zero calibration menu, you can select "SAVE" to save the data and back to home menu. Or press the "BACK" key to exit without saving. At this time, the screen displays \times and returns to the previous menu.

▮ The above operation is recommended to be repeated 3 times to ensure the stability of the instrument.

3. 7. 485 address setting

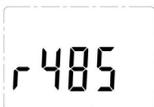

485 address set



Address



485 address set

▮ Enter the 485 address setting menu. At this time, the screen displays the current transmitter's 485 address. Press the "up" and "down" keys to adjust the value, and press the "left" and "right" keys to adjust the number of digits. After setting, press "OK" to save and return to the previous menu.



ⓘ This function item is only valid for the transmitter with RS485 signal output, please do not set the 4-20mA



password



Decimal point



unit



Range



4mA correction



20mA correction



return

gas detector.

3. 8. Factory setting

ⓘ Press the "OK" key to enter, enter the password (four "up" keys) and then enter the factory setting menu (automatically return to the main menu if an operation error occurs). The factory setting includes 6 options including decimal point, unit, range, 4mA correction, 20mA correction, and return. Press the "Up" and "Down" keys to select, and press "Exit" to exit without saving.

ⓘ Change the transmitter parameters to professional parameter settings. Improper operation is very likely to cause the meter to fail to work normally. It is not recommended that the user modify it by himself. Please contact the manufacturer if you need to modify it.



4mA Correction



Current



return



20mA Correction



Current



return

3. 9. 4mA/20mA current correction

ⓘ When the output signal of the 4-20mA transmitter does not match the actual concentration, it can be adjusted in the current correction option.

ⓘ Connect the multimeter to the transmitter S and G terminals respectively.

ⓘ Enter the 4mA current calibration menu, check the current value on the multimeter, press the "up" key or "down" key to adjust the output current until the multimeter value is displayed as 4mA, after the setting is completed, press the "OK" key to save and return to the previous menu.

ⓘ 20mA current correction operation is the same as the 4mA current correction operation.



3. 10. Save and return



Self-check



Main interface

- After all settings are completed, select save in the main menu and press "OK" to save and exit.

3. 11. Maintenance

- In order to ensure the performance of the transmitter, calibration should be carried out regularly. The calibration frequency depends on the specific working conditions. It is recommended to calibrate the transmitter every 3 months. The calibration record should be filled in each calibration (refer to Schedule 5). For factors such as high concentration impact and corrosive gas, it is necessary to shorten the calibration period. In either case, the calibration period must not exceed one year.
- It is strictly forbidden to use high-concentration gas impact sensors (such as using a lighter) in daily use, otherwise the sensor will be seriously damaged.
- Care should be taken to maintain the transmitter clean during maintenance. If the sensor cover is clogged, the detection sensitivity may be degraded or even damaged.
- Maintenance of the operation, calibration, etc. of the transmitter should be performed by qualified personnel.
- When the sensor's service life arrives, it should be replaced in time. The replacement of the sensor should be carried out under the guidance of the manufacturer or returned to the factory for replacement. When replacing it yourself, be sure to remove the sensor module plug on the main board and replace it. Otherwise, the cable will be damaged easily.
- The maintenance of the instrument and the replacement of the components must use the accessories provided by the company. The use of non-company replacement parts may affect the performance and safety of the instrument itself.
- For faults encountered in routine maintenance, please refer to Schedule 6 Common Troubleshooting. For those still unable to handle, please contact the manufacturer in time.



Chapter IV Attached Table

4. 1. Attached Table 1: Overview of Detected Gases

Gas		Measure range	principle	AG210	AG211	GTO-Anr-A	GTO-Anr-D
Combustible	EX	3~100%LEL	Catalytic combustion	-	-	●	●
Oxygen	O ₂	0-30%VOL 0-25%VOL	Electrochemical	●	●	-	-
Carbon	CO	0-1000µmol/mol	Electrochemical	●	●	-	-
Hydrogen	H ₂ S	0-100µmol/mol	Electrochemical	●	●	-	-
Chlorine	CL ₂	0-10µmol/mol	Electrochemical	●	●	-	-
Sulfur	SO ₂	0-20µmol/mol	Electrochemical	●	●	-	-
Ammonia	NH ₃	0-100µmol/mol	Electrochemical	●	●	-	-
Nitric oxide	NO	0-250µmol/mol	Electrochemical	●	●	-	-
Nitrogen	NO ₂	0-20µmol/mol	Electrochemical	●	●	-	-
Hydrogen	HCL	0-30µmol/mol	Electrochemical	●	●	-	-
Ozone	O ₃	0-1µmol/mol	Electrochemical	●	●	-	-
Ethylene	C ₂ H ₄ O	0-20µmol/mol	Electrochemical	●	●	-	-
Formalde-	CH ₂ O	0-20µmol/mol	Electrochemical	●	●	-	-
Methanol	CH ₃ OH	0-20µmol/mol	Electrochemical	●	●	-	-
Phosphine	PH ₃	0-5µmol/mol	Electrochemical	●	●	-	-
Hydrogen	H ₂	0-1000µmol/mol	Electrochemical	●	●	-	-
Fluorine gas	F ₂	0-1µmol/mol	Electrochemical	●	●	-	-
Hydrogen	HF	0-10µmol/mol	Electrochemical	●	●	-	-
Hydrogen	HCN	0-50µmol/mol	Electrochemical	●	●	-	-
Phosgene	COCL ₂	0-1µmol/mol	Electrochemical	●	●	-	-
Arsenide	AsH ₃	0-1/20µmol/mol	Electrochemical	●	●	-	-
Silane	SiH ₄	0-50µmol/mol	Electrochemical	●	●	-	-
Acrylonitrile	C ₃ H ₃ N	0-20µmol/mol	Electrochemical	●	●	-	-
Carbon	CS ₂	0-20µmol/mol	Electrochemical	●	●	-	-
Ethanol	C ₂ H ₅ OH	0-20µmol/mol	Electrochemical	●	●	-	-
Sulfur	SF ₆	0-1000µmol/mol	Infrared	●	●	-	-
Carbon	CO ₂	0-5%/100%VOL	Infrared	●	●	-	-
Toluene	C ₇ H ₈	0-20µmol/mol	PID	●	●	-	-
Xylene	C ₈ H ₁₀	0-20µmol/mol	PID	●	●	-	-
Benzene	C ₆ H ₆	0-20µmol/mol	PID	●	●	-	-
Acetic acid	C ₂ H ₄ O ₂	0-1000µmol/mol	PID	●	●	-	-
Organic Volatile Gas	VOC	0-20µmol/mol 0-1000µmol/mol	PID	●	●	-	-

Note: 1. The above are only some common gases and ranges. For gases and special ranges not listed in the parameter table, please consult the manufacturer directly. 2. 1µmol/mol=1ppm, according to relevant regulations, all units are changed to µmol/mol.



4. 2. Attached Table 2: Overview of PID Detection Gas

检测气体	分子式	响应系数
正丁烷,n-	C4H10	46.29
正丁醇	C4H10O	4.01
异辛烷	C8H18	1.08
异戊烷	C5H12	6
异松油烯	C10H16	0.46
异丁烯	C4H8	1
异丁烷	C4H10	8
异丁醇	C8H18O	1.5
异丙醇	C3H8O	4.35
异丙胺	C6H15N	0.7
己烯 1-	C6H12	0.9
己烷-2-1	C6H12O	0.8
己烷 n-	C6H14	3.28
乙氧基乙醇 1, 2-	C4H10O2	29.83
乙烯乙二醇	C2H6O2	20
乙烯酮	C2H2O	3
乙烯基溴	C2H3Br	1
乙烯基氯	C2H3Cl	2.1
乙烯	C2H4	8
醋酸丁酯	C6H12O2	2.42
乙酸异戊酯	C7H14O2	1.6
乙酸异丁酯	C6H12O2	2.25
乙酸异丙酯	C5H10O2	2.2
乙酸乙酯	C4H8O2	3.63
乙酸甲酯	C3H6O2	5.18
乙醛	C3H6O	1.68
乙硫醇	C2H6S	0.69
乙醇胺	C2H7NO	3
乙醇	C2H6O	8.72
乙撑氧	C2H4O	15
乙撑氯醇、2-氯乙醇	C2H5ClO	10
乙胺 2, 2-	C4H13N3	0.9
一氧化氮	NO	8
压克力的酸,丙烯酸	C3H4O2	2.74
溴乙烷	C2H5Br	5
溴氯甲烷	CHBr2Cl	10
溴苯	C6H5Br	0.7
辛烷 n-	C8H18	1.58
辛烷 1-	C8H16	0.69
硝基苯胺 4-	C6H6N2O2	0.8
硝基苯	C6H5NO2	1.7
橡胶基质	C5H8	0.69
烯丙醛、乙烯甲醇	C3H6O	2.07
烯丙基氯	C3H5Cl	4.5
戊烷基醋酸盐,n-	C7H14O2	1.8
戊烷基醇	C5H12O	3.2

检测气体	分子式	响应系数
戊烷-3-1	C5H10O	0.8
戊烷-2-1	C5H10O	0.79
戊烷 n-	C5H12	7.88
戊间二烯	C5H8	0.66
戊二醛	C5H8O2	0.9
四溴甲烷	CBr4	3
三元丁醇	C4H10O	2.62
三乙胺	C3H9N	0.5
三氯化氮	NC13	1
三甲基苯混合物	C9H12	0.34
三甲基苯 1, 3, 5-	C9H12	0.34
壬烷 n-	C9H20	1.27
氰苯、苯甲精	C7H5N	0.7
汽油蒸汽		1.05
啼啉	C5H5N	0.75
醚	C6H10O3	3
氯仿	CHBr3	2.8
氯苯	C6H5Cl	0.45
硫化氢	H2S	4
硫醇	C6H5SH	0.7
邻氯甲苯、2-氯甲苯	C7H7Cl	0.45
联苯基	C12H10	0.4
联氨	H4N2	3
沥青, 石油臭气		1
枯烯、异丙基苯	C9H12	0.58
糠醛	C5H4O2	1.38
糠醇	C5H6O2	2
苡烯	C10H16	0.45
甲硫醇	CH4S	0.7
甲基溴	CH3Br	1.9
甲酚-p	C7H8O	1.05
甲酚-o	C7H8O	1.05
甲酚-m	C7H8O	1.05
甲醇	CH4O	206.37
甲苯	C7H8	0.51
甲胺	CH5N	1.4
家酸乙酯	C3H6O2	29.83
环己烯	C6H10	0.75
环己烷、六氯化苯	C6H12	1.16
环己酮	C6H10O	1.03
环己醇	C6H12O	2.9
环己胺、六氢苯胺	C6H13N	0.98
环氧乙烷	C2H4O	4.86
环氧丙烷	C3H6O	7
环戊烷、五亚甲基	C5H10	4
氟乙烯, 乙烯基氟	C2ClF3	1



检测气体	分子式	响应系数
二异丁烯	C8H16	0.64
二异丙醚	C6H14O	0.68
二乙烯基苯	C10H10	0.4
二乙醚	C4H10O	0.88
二乙胺	C4H11N	1
二氧化氯	ClO2	1
二溴乙烷	C2H4Br2	2
二氯乙烯 1, 2-	C2H2Cl2	0.75
二氯甲	CH2Cl2	39
二氯(代)苯 o-	C6H4Cl2	0.5
二硫化碳	CS2	1.4
二甲氧基甲烷	C3H8O2	1.4
二甲醚	C2H6O	1.3
二甲硫	C2H6S	0.5
二甲基苯胺, NN-	C8H11N	0.6
二甲苯 m-	C8H10	0.44
二甲胺	C2H7N	1.4
二环戊二烯	C10H12	0.81
二苯醚	C12H10O	0.8
对氯甲苯	C7H7Cl	0.5
对苯二酚	C6H6O2	0.8
丁烯	C4H8	1
丁酸乙酯	C6H12O2	0.95
丁醛	C4H8O	1.2
丁硫醇	C4H10S	0.54
丁二烯二聚物	C4H6O2	4
丁二烯	C4H6	0.83
丁醇	C4H10O	3.5
丁胺, 2-	C4H11N	0.9
丁胺	C4H11N	1
碘甲烷	CH3I	0.4
醋酸乙烯	C4H6O2	1.1
醋酸丙烷, n-	C5H10O2	2.5
醋酸, 乙酸	C2H4O2	36.15
柴油机燃料		0.75

检测气体	分子式	响应系数
丙烯酸甲酯	C4H6O2	3.4
丙烯	C3H6	1.4
丙烷-1-醇	C3H8O	4.8
丙烷, 1-	C3H7Br	1.3
丙酮	C3H6O	0.71
丙酸乙酯	C5H8O2	2
丙-1, 2-二醇, 总	C3H8O2	10
表氯醇	C3H5ClO	8
苯乙酯	C8H10	0.54
苯乙烯	C8H8	0.44
苯甲酰氯	C7H7Cl	0.55
苯甲醛	C7H6O	0.86
苯甲醚=茴香醚	C7H8O	0.47
苯甲基蚁酸盐	C8H8O2	0.77
苯甲醇	C7H8O	1.25
苯二胺, p-	C6H8N2	0.6
苯胺	C6H7N	0.5
苯	C6H6	0.5
保松泰	C4H8O	1.15
巴豆醛、2-丁烯醛	C4H6O	1
氨基乙烷乙酯	C2H7N	1
WMD 甲基水杨酸	C8H19O4	1
WMD n-芥子气	C4H18SCl2	1.1
UDMH	C2H8N2	1
THF 四氢呋喃	C4H8O	1.55
tert-Butyl alcohol	C4H10O	3.5
TEA 三乙胺	C6H15N	0.9
TDI	C9H6N2O2	1.6
Pinenes 松节油	C10H16	0.6
PGE	C9H10O2	0.8
四氯乙烯	C2Cl4	0.7
Octyl acrylate	C11H20O2	1
DMS 甲基硫	C2H6S	0.5
DMF	C3H7NO	0.9

Note: This table only lists some VOC gases, please consult the manufacturer for other unlisted gases.



4. 3. Attached Table 3: Standard Gas Concentration Table

Gas	Measure Range	Standard gas	Concentration
CH4	100%LEL	CH4	60%LEL
O2	30%VOL	O2	20. 9%VOL
CO2	5%VOL	CO2	3%VOL
CO	1000µmol/mol	CO	700µmol/mol
	500µmol/mol		300µmol/mol
VOC	1000µmol/mol	I-C4H8	700µmol/mol
	20µmol/mol		15µmol/mol
H2	1000µmol/mol	H2	700µmol/mol
H2S	100µmol/mol	H2S	80µmol/mol
NH3	100µmol/mol	NH3	60µmol/mol
HCL	30µmol/mol	S02	60µmol/mol
CL2	10µmol/mol	CL2	10µmol/mol
S02	20µmol/mol	S02	15µmol/mol
N02	20µmol/mol	CL2	10µmol/mol
C2H4O (ET0)	20µmol/mol	C2H4O	10µmol/mol
HF	10µmol/mol	CL2	10µmol/mol
PH3	5µmol/mol	H2S	5µmol/mol
COCL2	1µmol/mol	CL2	1µmol/mol

Note: Due to the inevitable error in the concentration of the standard gas, the above concentration values are for reference only. For gases and special ranges not listed in the parameter table, please consult the manufacturer directly.



4. 4 Attached Table 5: Common Detection Failures and Solution

Type of failure	Cause	Solution
The instrument has no output	The wire is connected incorrectly	Check and re-wiring
	Abnormal power supply	Check the power supply circuit
	The circuit is faulty	Return to the company for repair
	The sensor cable is broken	Return to the company for repair
The host reading is low	Sensor invalid	Replace the sensor module.
	Not calibrated after the maintenance period	Re-calibrate
	Indication deviation	Recalibrate
The host reading is too high	Sensor invalid	Replace the sensor module
	Not calibrated after the maintenance	Re-calibrate
	High-concentration gas shock	Return to factory for repair
	Indication deviation	Indication deviation
Host reading is unstable	Sensor invalid	Replace the sensor module
	Interference	Check whether the grounding of the instrument is good
	Stabilization time is not enough	wait for power on
	Abnormal calibration	Recalibrate
	Circuit failure	Return to factory for repair
The instrument responds slowly	Sensor invalid	Replace the sensor module
	Dust blocking the explosion-proof disc	Clean up the dust of the explosion-proof disc
	Circuit failure	Return to factory for repair



Technological innovation, professional

Nanjing AIYI Technologies Co., Ltd.

Address: Building 13, No. 1318 Qingshuiting East Road, Jiangning District,
Nanjing 210000, Jiangsu, China

Tel: +86-2587756351 Fax: 025-87787362

Web: www.autequ.com Email: sales@autequ.com